2023/2024 PILOT INFORMATION



FACTORIA DEPARTURE

Fly runway centerline until reaching 700' then make standard left downwind west of I-405. When abeam the Control Tower, make 45° right turn to exit traffic pattern. Cross over I-405 and then fly direct toward Factoria to exit Delta airspace.

SOUTH FLOW: RUNWAY 16

KENT DEPARTURE

Fly runway **centerline until reaching 1,000'** then fly direct toward the east side of **Valley Medical Center**. Continue straight ahead toward a point 1 mile east of SR-167 to exit Delta airspace without entering Boeing's Delta airspace.

LAKE YOUNGS DEPARTURE

Fly runway centerline until reaching 1,000' then turn left and fly direct toward the southwest side of Lake Youngs to exit Delta airspace.

MUSEUM / KBFI DEPARTURE

Request with **Renton Ground** on initial contact. Fly runway centerline and **do not turn west** until you establish two-way radio contact with **Boeing Tower on frequency 118.3**. Renton Tower will tell you when to change frequencies after any potential traffic conflicts are resolved.

EAST CHANNEL DEPARTURE

Fly runway **centerline until 1 mile** past departure end of runway then fly outbound **over the middle of the East Channel**. Fly direct toward the **East Channel Bridge** to exit Delta airspace.

NORTH FLOW: RUNWAY 34

LAKE YOUNGS DEPARTURE

Fly runway **centerline until reaching 700'** then make a standard right downwind **west of I-405**. When **abeam** the **Control Tower**, make **45°** left turn to exit traffic pattern. Cross over I-405 and then fly direct toward northeast side of Lake Youngs to exit Delta airspace.

MUSEUM / KBFI DEPARTURE

Request with **Renton Ground** on initial contact. Fly runway centerline and do not turn west until you establish two-way radio contact with **Boeing Tower on frequency 118.3.** Renton Tower will tell you when to change frequencies after any potential traffic conflicts are resolved.

FROM KBFI

RAINIER BEACH TRANSITION: Depart runway, and when able, make a right downwind departure to overfly Rainier Beach at 1,500 feet. Expect frequency change from KBFI tower to KRNT tower prior to Rainier Beach. At Rainier Beach, continue climb to 1,900' DIRECT to KRNT Airport. Continue present heading to SR-169 toward Cedar Hills Landfill until outside of KRNT Class D airspace, then on course.

Renton Airport / Clayton Scott Field

Phone: 425-430-7471

Website: rentonwa.gov/airport

Latitude: N47° 29.59'

Longitude: W122° 12.95'

Field Elevation: 32' MSL

EAST CHANNEL ARRIVAL

Make initial request approximately 8-12 miles (depending on airspeed) from KRNT. Enter Delta airspace via the **East Channel Bridge** and fly inbound over the middle of the East Channel. Unless otherwise instructed by Renton Tower, make straight-in. Report 2 mile final.

SOUTH FLOW: RUNWAY 16

LAKE YOUNGS ARRIVAL

Make initial request approximately 8-12 miles (depending on airspeed) from KRNT. Enter Delta airspace via the northeast side of **Lake Youngs**. Fly direct to **Maplewood Golf Course**. Unless otherwise instructed by Renton Tower, make 45° to left downwind. Report over **Maplewood Golf Course**.

FACTORIA ARRIVAL

Make initial request approximately 8-12 miles (depending on airspeed) from KRNT. Enter Delta airspace via Factoria. Fly direct to the **Water Tower.** Unless otherwise instructed by Renton Tower, make 45° to right downwind. Report over the **Water Tower.**

NORTH FLOW: RUNWAY 34

KENT ARRIVAL

Make initial request approximately 8-12 miles (depending on airspeed) from KRNT. Enter Delta airspace 1 mile east of SR-167. Fly direct to the east side of **Valley Medical Center.** Unless otherwise instructed by Renton Tower, make straight-in. Report abeam **Valley Medical Center.**

LAKE YOUNGS ARRIVAL

Make initial request approximately 8-12 miles (depending on airspeed) from KRNT. Enter Delta airspace via the southwest side of **Lake Youngs**. Fly direct to **Maplewood Golf Course**. Unless otherwise instructed by Renton Tower, make a 1 mile right base. Report over **Maplewood Golf Course**.

HELICOPTER PROCEDURES

Arrival: Enter the traffic pattern at or above 500' MSL and do not turn base leg closer than .5 mile.

Runway 16: 5082' x 200'

300' displaced threshold

Glide path is 3.00° – PAPI

Departure: Proceed straight out until .5 mile from the airport and 500' MSL before proceeding on course.

Mid-field Arrival & Departures: Fly as instructed by the Tower.

Pattern: Fly at 1,000' MSL.

Runway 34: 5042' x 200'

340' displaced threshold

Glide path is 3.75° – PAPI

90 Noise Sensitive Area East Boeing Field Air Space Channel Factoria Bridge South Flow North Flow Touch & Go Pattern 405 Mercer 1,000' MSL Island Water Tower 1,000' MSL RENTON AIRPORT SE 128th St. ML King Way Maplewood Golf Course 405 Renton (169) East Hill (167) Valle Medical Center

MAP NOT SUITABLE FOR NAVIGATION


OTTY OA TOTY OA PENTON

FLY FRIENDLY Please adhere to our VFR Voluntary Noise Abatement procedures to help limit aircraft noise in Renton and our neighboring communities.

WILL ROGERS-WILEY POST SEAPLANE BASE (W36)

All takeoffs, landings, and idle taxiing should be carried out within the area identified as the Seaplane Operations Area with regard for wind, weather, and boat traffic. The Seaplane Operations Area is east of an imaginary line extending from the seaplane dock on a heading of 320 degrees. NO STEP TAXIING. Operations are at your own risk. Use caution for localized shoaling and shallow water as you approach the seaplane base and around the seaplane docks and launch ramp.

Note: For West Channel arrivals or departures, stay west of the runway extended centerline. For East Channel, stay East of Centerline. If you desire anything other than what is described as the Washington One arrival/ departure do not ask for Washington One at all and advise. (i.e. Landing to the north from the north. Ask for Factoria Arrival).

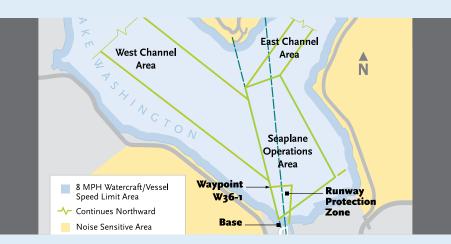

WASHINGTON ONE DEPARTURE

On initial contact with Renton Tower, advise your specific location on the lake (e.g. east or west of the extended runway centerline and whether you are out of our line of sight behind buildings). Request the "Washington One Departure" and tell the controller whether you will use the east or west channel. State the appropriate ATIS code. You must establish two-way radio contact prior to entering Delta airspace (i.e. prior to becoming airborne). Departure from the lake is at pilot's own riskreport airborne. Fly mid-channel to avoid noise sensitive areas. West Channel departures remain at or

below 800' MSL while in the west channel, over the water, and until you're outside of Boeing airspace.

WASHINGTON ONE ARRIVAL

On initial contact with Renton Tower, advise your location. Request the "Washington One Arrival" and tell the controller whether you will use the east or west channel. State the appropriate ATIS code. You must establish two-way radio contact prior to entering Delta airspace. Fly areas. Remain at or below 800' MSL while in the west channel, over the water, and in Boeing airspace. Landing on the lake is at the pilot's own risk-report on the lake.

mid-channel to avoid noise sensitive

VFR-VOLUNTARY NOISE ABATEMENT

NOISE ABATEMENT PROCEDURES

Maintain highest FAA-advised altitude over noise-sensitive residential areas identified in yellow on the map. (Reference VFR proceedings for noise-sensitive areas in FAA A/C 91-36D)

- Honor voluntary curfew of nighttime engine maintenance run-ups.
- > See special procedures for seaplanes and helicopters.

Noise abatement procedures at Renton Airport are voluntary measures by pilots to "fly friendly" and be good neighbors to the citizens who live under aircraft flight paths. Pilots should only deviate from these procedures when necessary to comply with any Air Traffic Control requests or in the interest of safety. Pilots of large or turbine-powered aircraft must comply with the provisions of FAR 91.129(e), rather than these procedures. All altitudes are MSL.

FOR AIRCRAFT WITH A CONSTANT SPEED PROPELLER

After takeoff, pilots should reduce propeller RPM when at safe altitude at or below 700'. The propeller RPM may be increased when clear of noise sensitive areas or 2,000'. On approach for landing, pilots should not increase the propeller to full RPM until the power has been reduced to final approach power.

FOR TAKE-OFFS WHICH REMAIN IN THE TRAFFIC PATTERN

Pilots should climb at the Best Rate of Climb (Vy) or the Best Angle of Climb (Vx), or a combination thereof, to at least 700' before turning crosswind. At 1000', throttle down to pattern power and fly a close in downwind west of I-405. Depending on traffic flow, pilots should **avoid descending below 800'** over Kennydale or the Renton East Hill. Either turn base leg before these areas or maintain altitude as necessary to fly over them at 800' or above.

FOR DEPARTURES LEAVING THE TRAFFIC PATTERN

Pilots should climb at the Best Rate of Climb (Vy) or Best Angle of Climb (Vx), or a combination thereof, until reaching 1,000' and thereafter at cruise climb speed to departure altitude.

WILL ROGERS-WILEY POST SEAPLANE BASE (W36)

Phone: 425-430-7471 Website: rentonwa.gov/airport Latitude: N47° 29.99' Longitude: W122° 13.16'

Virtual Buoy: Waypoint W36-1

Waterway 12-30: 5000' x 200' Waterway 12: Right Traffic Virtual Buoy: Waypoint W36-1 Waterway 12-30: 5000'x 200' Waterway 12: Right Traffic

RENTON AIRPORT INFORMATION

PHONE NUMBERS

Airport Office	425-430-747
Renton Police/Fire	91
Flight Service	. 800-WX-BRIE
FSS Clearance Delivery	888-766-826
ASOS	425-255-608

FREQUENCIES

Do not enter Class Delta airspace unless two-way radio contact has been established with Renton Tower.

Renton Tower
CTAF 124.7
Renton Ground 121.6
Seattle Approach 119.2 / 128.5 / 125.9
Unicom 122.85 / 122.77
ATIS 126.95
Seattle TRACON

AIR TRAFFIC CONTROL HOURS

7 a.m. to 8 p.m. PT (October 1 - April 30) 7 a.m. to 9 p.m. PT (May 1 - September 30)

PATTERN ALTITUDES

East Side	1,000' AGL
West Side	1,218' AGL

TRANSIENT JETS OR **HELICOPTERS**

For parking arrangements, transient jets or helicopters should contact:

Pro-Flight at 425-228-9510 or on Unicom 122.85

BUSINESS DIRECTORY

Ace Aviation

425-204-0845 Tie-downs, Aircraft Maintenance and Repair

Aerodyne

206-571-7489 Tie-downs, Hangar

Boeing Employees Flying Association (BEFA) 425-271-2332

Tie-downs, Flight Instruction

Friday Harbor Seaplanes 425-277-1590 Seaplane Charters & Tours

Northwest Seaplanes 425-277-1590 Aircraft Maintenance

Pro-Flight Aviation FBO 425-228-9510

Flight Training, Fuel 100LL/ Jet A. Aircraft Maintenance. Tie-downs

Rainier Flight Service 425-610-6293

Tie-downs, Fuel 100LL, Flight Instruction

Seaplane Scenics 206-499-2135

Flight Training, Scenic Tours

Seattle Aircraft Charter 833-953-8759

Charters, Aircraft Maintenance

The Landing Gear Works 509-884-9546

Airplane Parts Mfg.

U.S. Customs (ADCUS) 206-214-2200 option #1 sea.ga@cbp.dhs.gov

